



7 Blade


From 1" to 2½" X 1¾" deep

HOLE SAW

Cuts Up To 1-3/4" Deep. For wood, plastics and soft metals.

Usage:

1. Remove all blades (3) from the base (1)
2. Pick the size you want to use.
3. Install blade (3) into the right groove, twist clockwise to lock it in the base.
4. When possible try to finish your hole from the opposite side, once tip of the drill (2) goes through.
5. After use store all blades locked in the base.

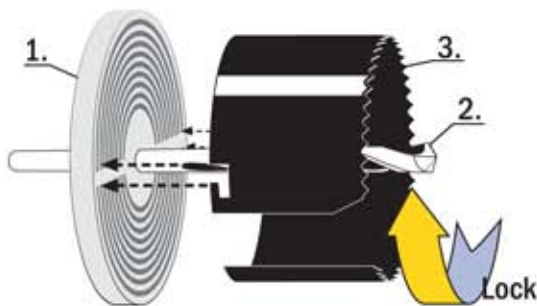

- Includes:
- 1" (26mm)
 - 1¼" (32mm)
 - 1½" (38mm)
 - 1¾" (45mm)
 - 2" (50mm)
 - 2¼" (56mm)
 - 2½" (63mm)

Blades

Visit us and order on the web at:
www.eazypower.com

eazypower®

4006 W. Belden Avenue • Chicago, IL 60639-3702 • U.S.A.

Phone: (773) 278-5000 • Toll Free: (800) 327-9769

Fax: (773) 278-5115 • (800) 882-6847

www.Eazypower.com • E-mail: orders@eazypower.com

Our Toll Free Numbers Are Also Accessible Through: Alaska, Hawaii, Canada, Mexico, Puerto Rico, St. Thomas, St. John & St. Croix